

A guide to your Timber Bed Frame

What comes with your


single timber bed frame

| Box 1/4 | | |
|---------|-----------------------|----------|
| 5x | Legs | |
| 2x | Frame hand screws | |
| 4x | Headboard hand screws | |
| 4x | Washers | © |
| 5x | Thin felt pads | |
| 2x | Thick felt pads | |
| 10x | Slats | |

What comes with your

single timber bed frame

Box 2/4

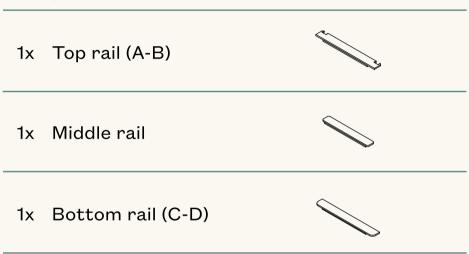

What comes with your

single timber bed frame

Box 3/4

1x Side rail (B-D)



1x Side rail (A-C)




Box 4/4

1x Headboard




Before you begin, make sure to choose a spot for your timber bed frame against a wall.

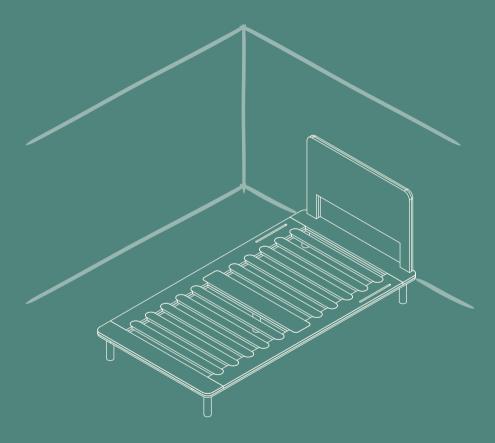

Please contact our customer experience team if you cannot place your bed frame against a wall.

Screw 1x leg into middle rail. Set aside.

Optional: Stick thin felt pads onto underside of legs. We recommend this for timber or hard floors.

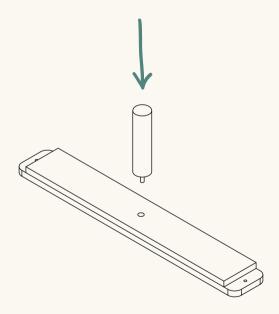


Line up top (A-B), bottom (D-E), and side rails (B-D, A-E) together.


Match the letters and have the top rail closest to the wall

Screw 4x legs into corners to secure together.


Optional: Stick thin felt pads onto underside of legs. We recommend this for timber or hard floors.

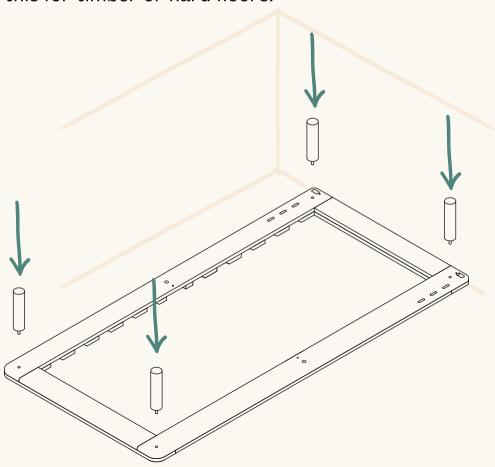


Flip frame upright.

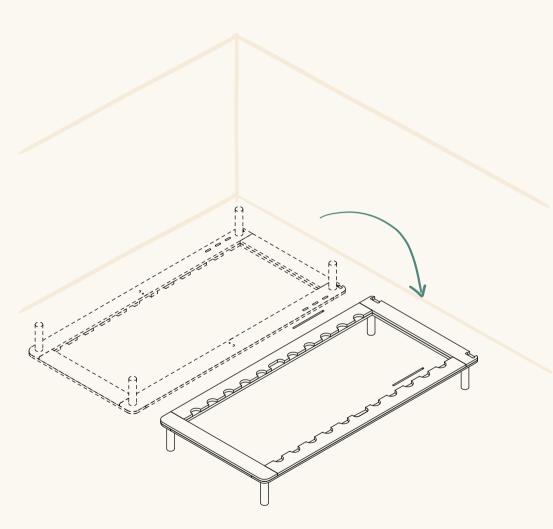


Place previously assembled section onto frame.

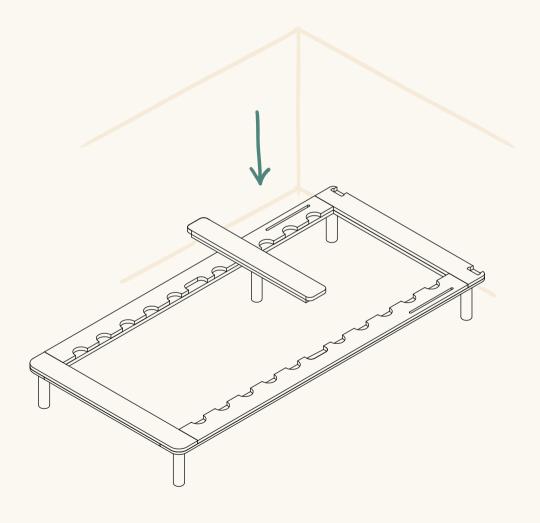


Secure together using 2x frame hand screws with washers.

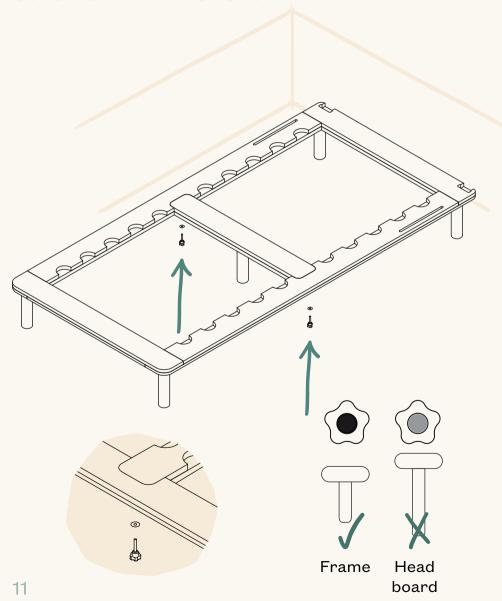


Place headboard into frame.

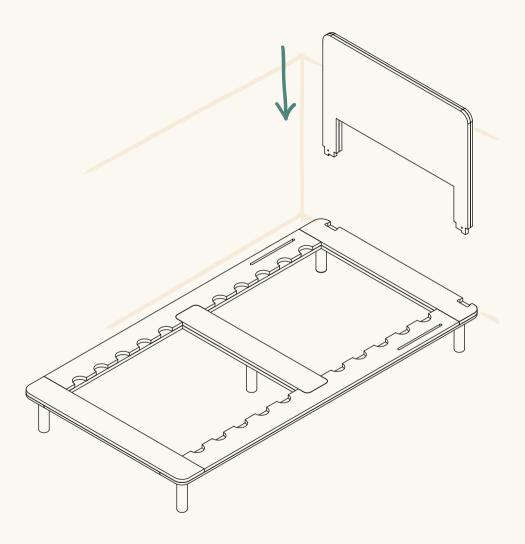


Secure bottom of headboard using 2x washers and headboard hand screws.

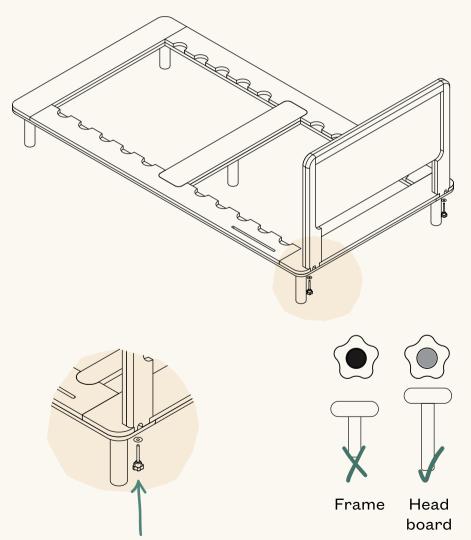

Secure back of headboard using 2x headboard hand screws.

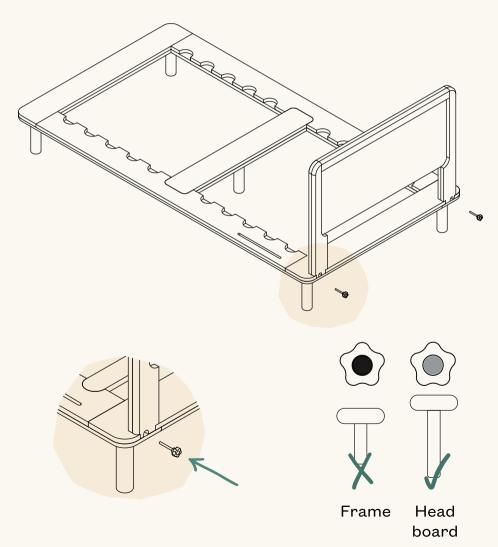

Stick 2x thick felt pads to the back side of the headboard to protect your wall.

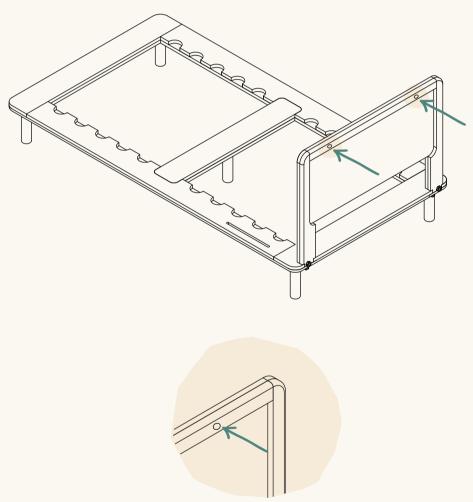

Place slats on and enjoy!

Caution: Avoid standing on slats.

